


E Type - S/N# 205E +

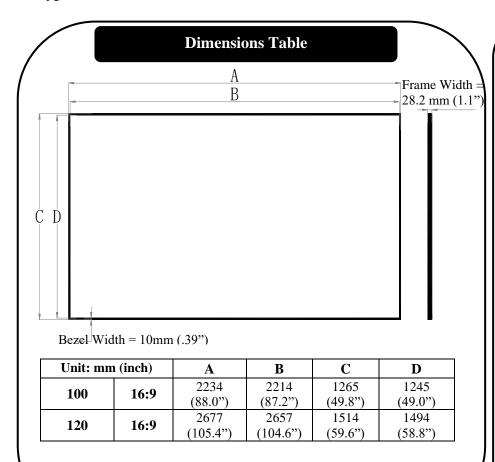


#### **Screen Maintenance**

Dust, dirt and scratches on the projection screen surface will affect the quality and performance of the projection image. Follow the instructions below to properly maintain the screen.


- 1) The screen surface has a horizontal structure. **DO NOT** wipe the screen up and down or in a circular motion. Wipe from left to right only. 2) Clean the dust on the screen surface with a
- soft brush or microfiber cloth. A rough towel or cloth may damage the screen's surface. 3) Gently wipe the screen with a moistened microfiber cloth with mild soap diluted in water.
- which is not covered under warranty. • Don't touch the screen material to avoid leaving fingerprints. Use gloves when handling the material.


be followed to avoid damaging the material,


- Don't **scratch** the material, as it will leave permanent markings on the screen's surface.
- Don't **point** to the screen material with a fingertip or other sharp objects to prevent damage to the material.
- Don't use acetone, benzene, alcohol and any other organic solvents to clean the screen material. Using such chemicals will permanently damage the screen.

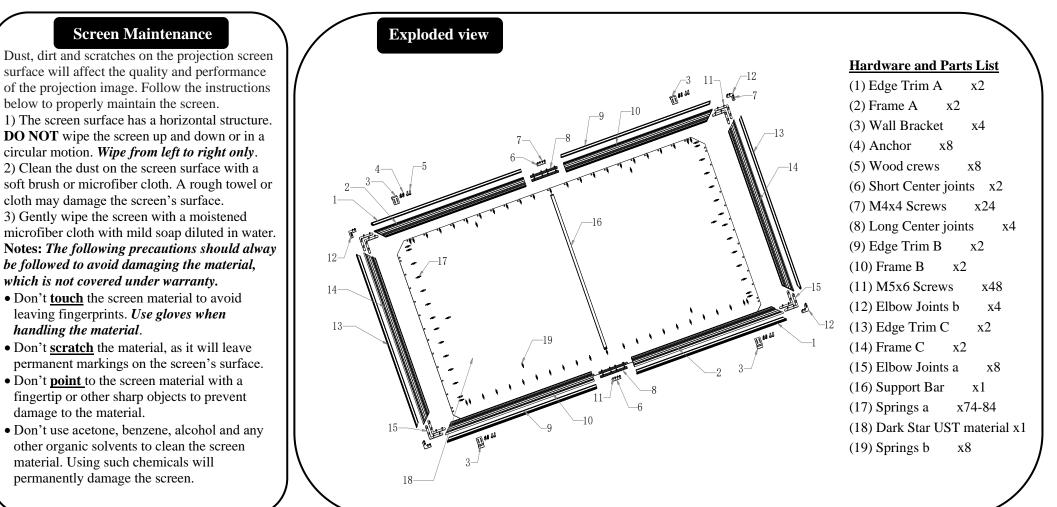

## **Screen Installation**

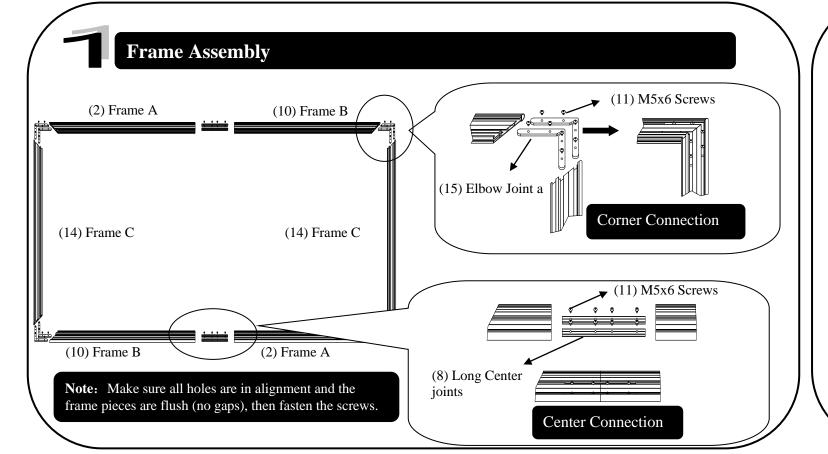

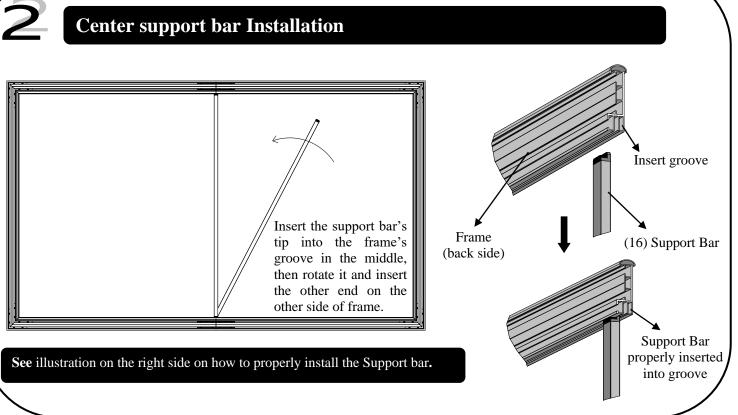


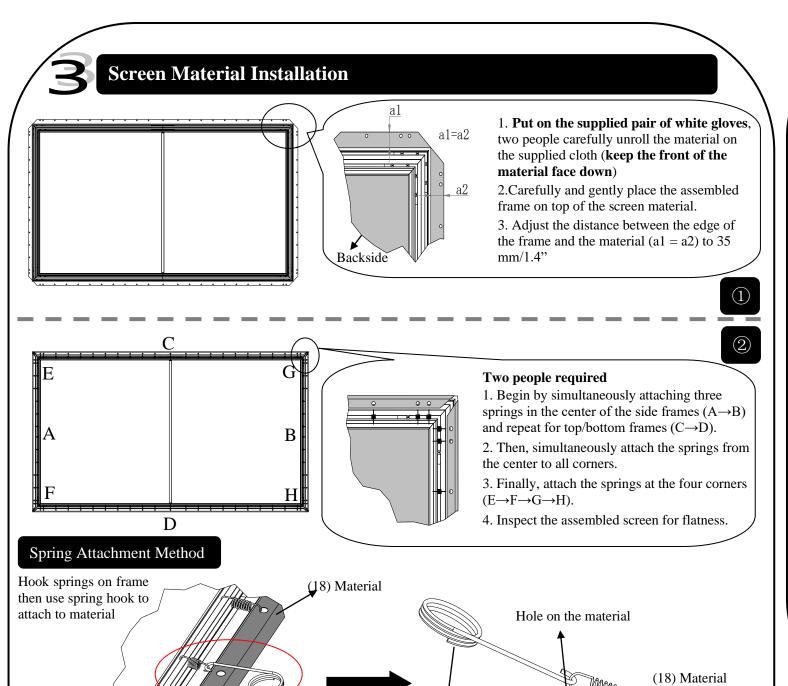

## **Edge Trim Installation** (12) Elbow Joints b **Corner Connection Center Connection** 1. Connect **edge trims A&B** to form the top/bottom trims with the Short Center joints, and then insert them on the top/bottom frames. (6) Short Center joints 2. Connect the side **edge trims C** with the top/bottom edge trim with **elbow joints b**. 3. Adjust the trim so that the top and bottom trim pieces are touching and show no gaps on the (19) Spring b corners. Then fasten them with the M4 x4 screws. 4. Attach a spring b on the middle of each edge trim (1-6) to the frame as show on the left illustration. Edge Trim 3

# 5


## Wall Installation

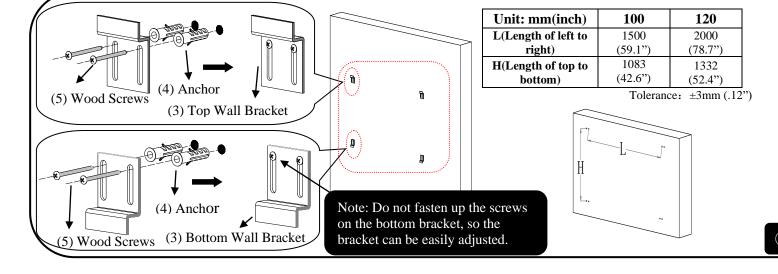


Spring hook

(17) Spring a

Spring hook

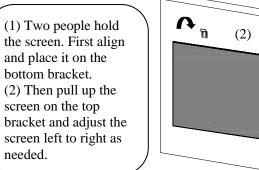

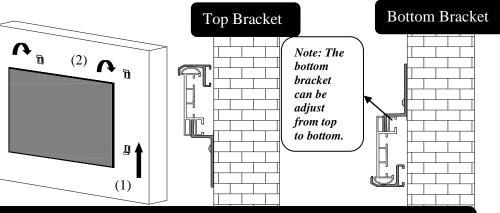

Note: Make sure the direction of the material is correct before you hang the screen to the wall. The material is labeled top o bottom.