



Twilight Portable Series (120" Models)

Outdoor/Indoor Portable Projection Screen

User's Guide

Thank you for choosing the ***Yard Master Pro*** portable projection screen! Please read this user guide before utilizing the screen. Correct usage and maintenance will ensure a long product life

Care & Use Instructions





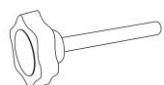



- ◆ Elite highly recommends two people to assemble the Yard Master Pro screen.
- ◆ Please be sure to distinguish between the front and back of the screen fabric when setting up the projection screen. CineWhite® UHD (front projection) and Wraith Veil (rear projection) are both labeled front, back.
- ◆ Dust, dirt and scratches on the projection surface will affect the picture quality, please take note of the points below to prevent that from occurring:
 1. Do not touch the projection surface with your hands
 2. Do not write or draw on the projection surface
 3. Do not use fingers or sharp objects to point on the projection surface; this will damage the screen material.
 4. Use a soft-damp cloth to clean the projection surface; do not use chemical cleaning agents or alcohol.
 5. Use clean water when dampening the cleaning cloth and do not rub against the material to clean it.
- ◆ After using the screen, disassemble it and store it in the carrying bag provided.
- ◆ To avoid damage and injury, the screen should only be operated by adults.

Product Description

Design: The aluminum frame is designed to be light weight and easily operated making it easy to carry, assemble and disassemble.

Screen Fabric: The screen fabric is attached to the rectangular frame and held in place by several pegs along the frame, which ensure an evenly stretched and flat surface. The CineWhite® UHD (front projection) and Wraith Veil (rear projection) screen materials are durable and can be folded many times without causing damage or distortion to the surface.

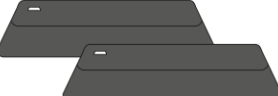Twilight Portable Frame Parts and Hardware


<p>A. Folding frame x1</p> 	<p>B. Left and right folding legs x2</p> 	<p>C. Screen material bag x2</p> 
<p>D. Projection screen material x2</p>  <p>CineWhite™ UHD (front projection)/Wraith Veil (rear projection)</p>	<p>E. Knob screw x6</p> 	<p>F. Carrying Bag x1</p> 
<p>G. Rope with ring x4</p> 	<p>H. Stake x4</p> 	

Note: The parts list above is subject to change without notice.

Correct usage of the projection screen will ensure better viewing results.


For front projection, assemble and view the screen as indicated in Fig.1.

For rear projection, assemble and view the screen as indicated in Fig.2.

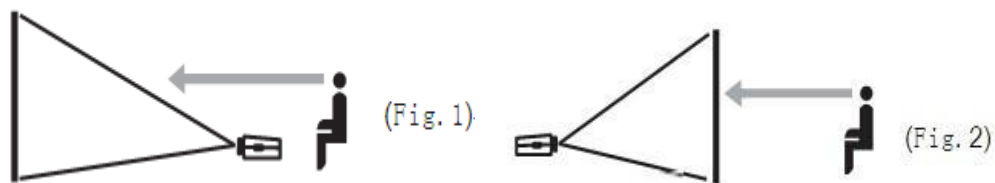


Frame Assembly


1. Take the **folding frame (A)** out of the **carrying bag (F)** and place it on a flat surface. Fully unfold the frame from the center, as shown below.

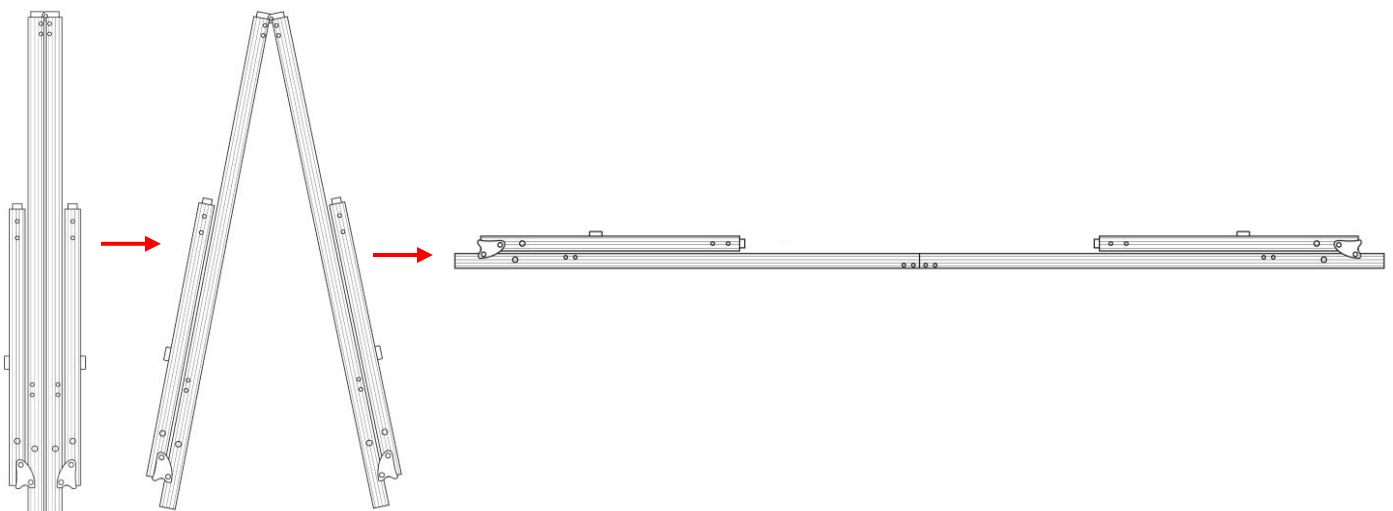



2. Next, unfold the smaller sections out.

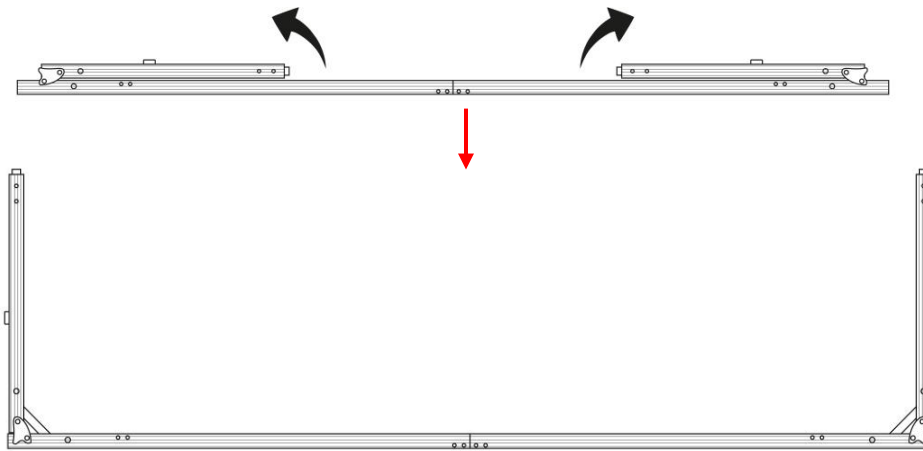

3. Lastly, unfold one half of the frame from the other, as shown.

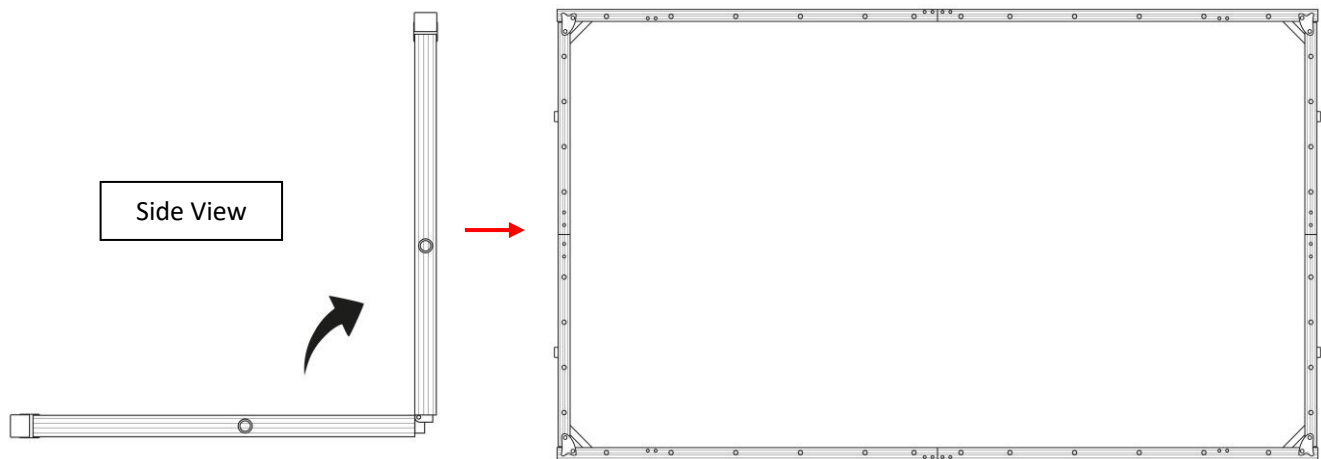


Note: When unfolding the frame and legs, be sure the latches on the hinges "click" into place. Please also make sure all 4 corners of the frame are at a 90° angle and the hinged support bar is straight and not bent.

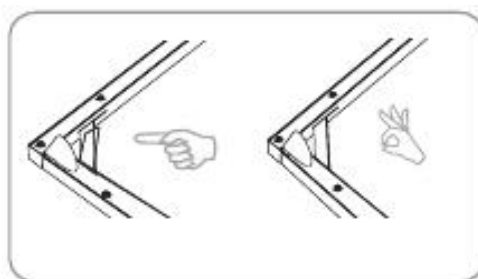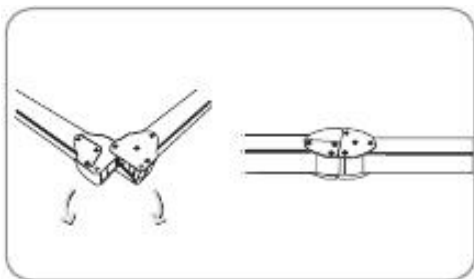


Leg and Screen Material Attachment

4. Carefully take the left and right *folding legs (B)* out of the *carrying bag (F)* and place it on a flat surface. Unfold the vertical leg sections as shown.


Warning: The additional support sections, located at the bottom of the legs, may unfold on its own. Please be sure to use caution while removing/placing the legs from/to the bag

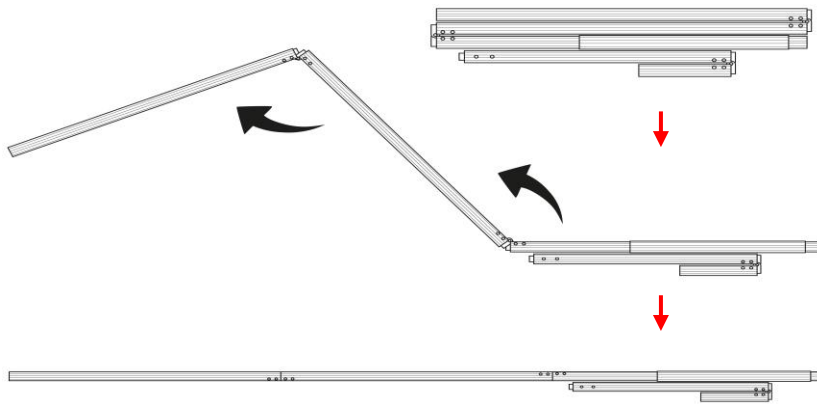

5. At the bottom of the legs, unfold the additional support sections as shown below.

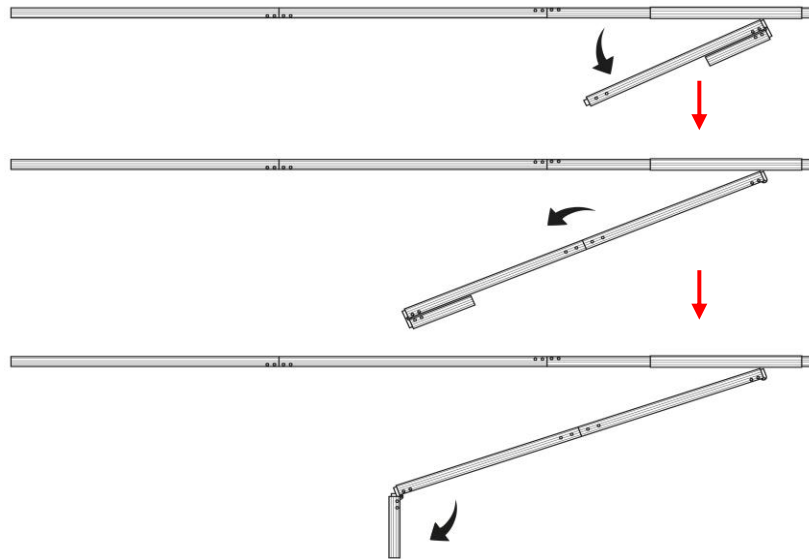


6. Line up the correlating screw holes on the frame and legs and secure using the **knob screws (E)** provided. See below.

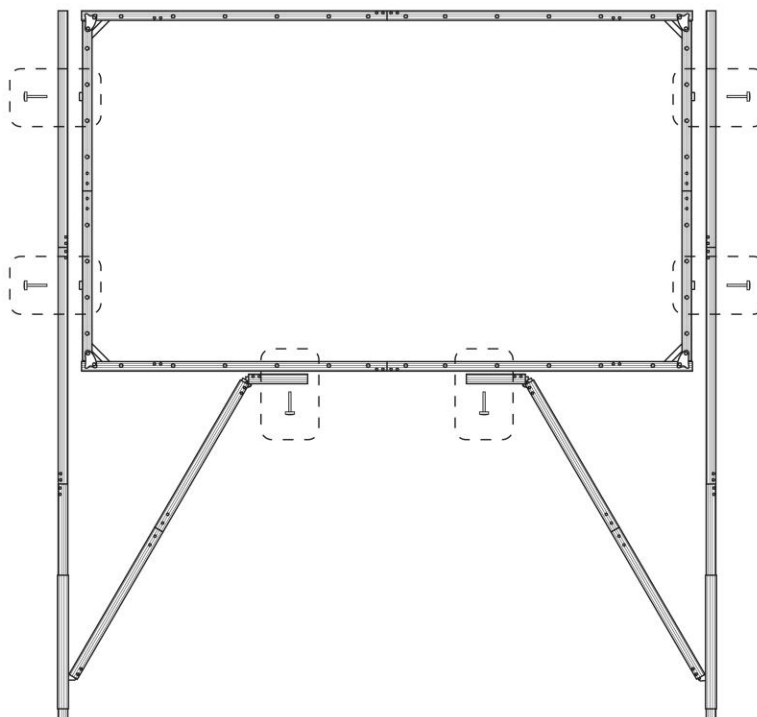


Note: Be sure to place the legs in which the eye loops are facing outward from the frame. These eye loops will be utilized with the **rope and clip (G)** to help secure your screen in windy applications.

7. To attach the **screen material (D)**, first utilize the attached pull tabs at the corners to easily hook the holes on the material to the pegs on frame (1). Next, attach the middle sections of sides (2). Then, follow with the rest of the sections (3). Please follow this order, shown in the diagram below. (1→2→3)

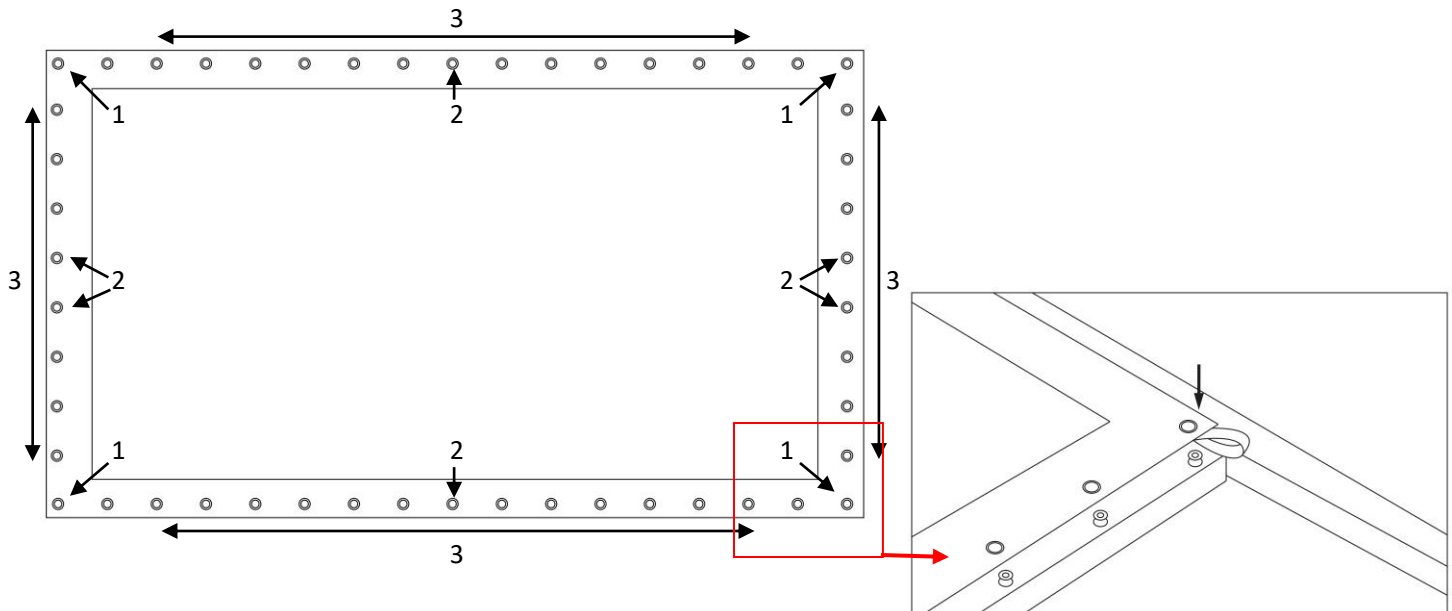


8. After the screen material is fully secure, attach the **ropes and rings (G)** to each side of the legs at the top of the frame (1 at each eye and loop).

9. Open one side of each folding leg and carefully lift the top of the frame to stand up the screen. While keeping a hold on the screen, open the other side of each folding leg. Two people are needed for this step.

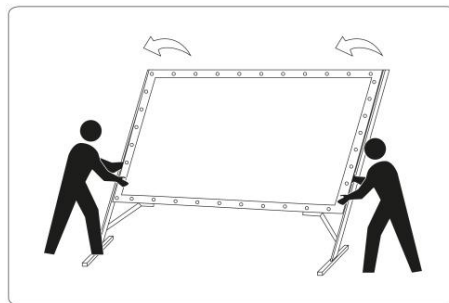


10. To secure the screen, hammer the **stakes (H)**, at your desired location, into the ground.

11. Finally, tie the 4 **ropes (G)** to the **stakes (H)** to prevent the screen from tilting or falling over. Your screen should look like figure shown (right).

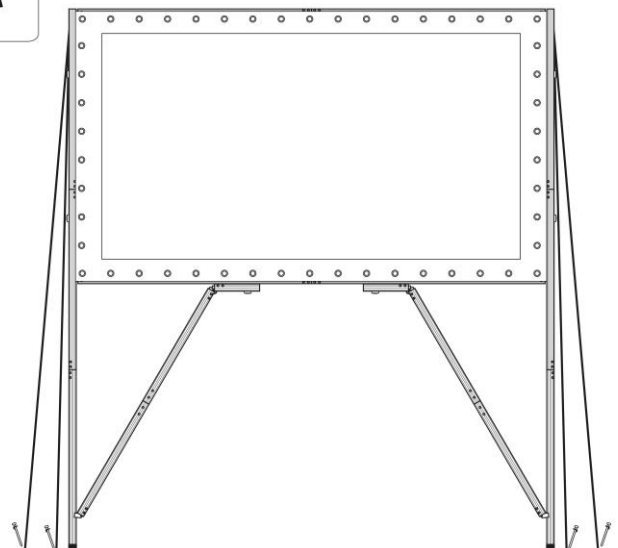


Screen Disassembly

1. Remove **ropes (G)** and **stakes (H)** from the ground.
2. Unlatch the hinged support bars on front side of each leg so that it is bent and fold that half of the legs up. Slowly lower the screen to the ground (towards the closed legs). Two people are needed for this step.

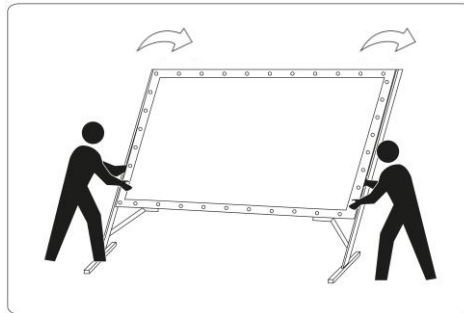


3. Unlatch the hinged support bars and fold down other half of legs.
4. Loosen and remove the **ropes (G)** and **knob screws (E)** from each leg.
5. Remove the **folding legs (B)**. Fold and place them inside the **carrying bag (F)** provided.

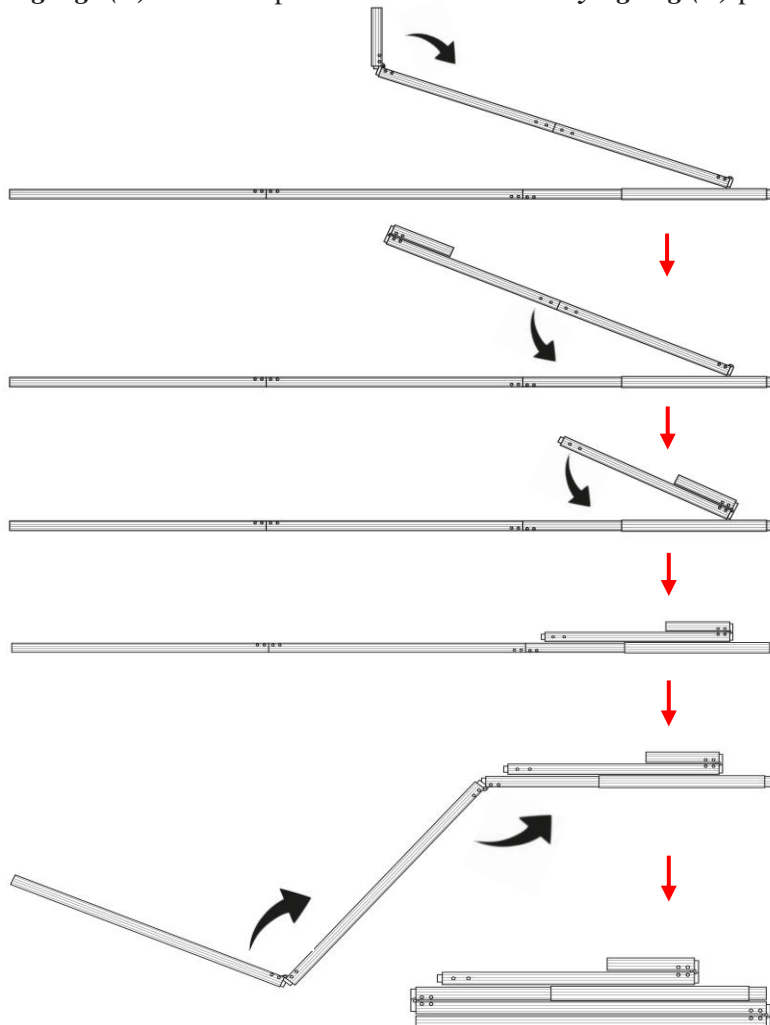


6. Detach the **screen material (D)** from the **folding frame (A)** by carefully pulling and lifting the edges to unhook the material from the pegs.

7. Fold **screen material (D)** in half, folding the bottom of the screen towards the top. Then, fold in half again in the same way. Lastly, fold the material into thirds to condense the length and place it into the **screen material bag (C)**.


*If you prefer to roll the material, instead of folding into thirds, roll from one end to the other after folding in half twice.

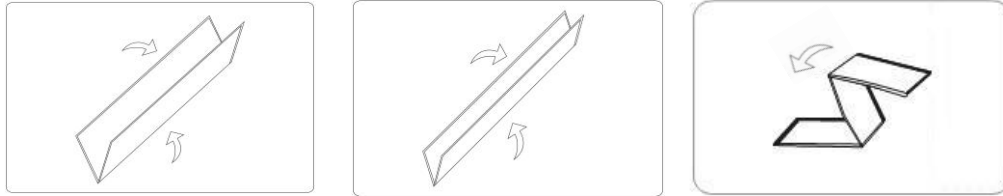

8. Unlatch the hinged support bars in each corner of the **folding frame (A)**.

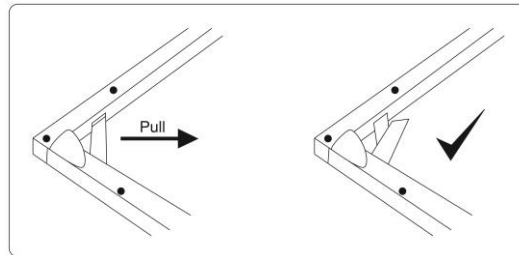

9. Press in the black locking buttons, near the folding joints, and carefully fold the frame.

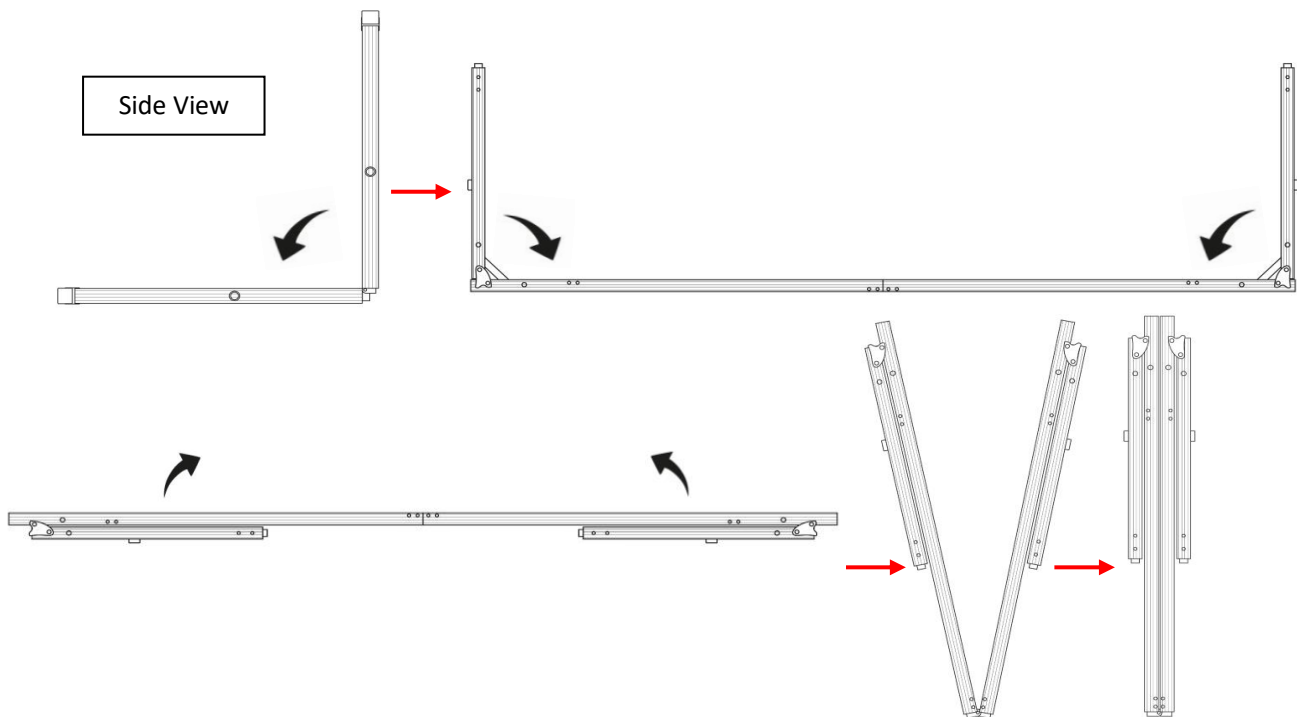

10. Store the screen in the provided **carrying bag (h)**. Be sure to place folding frame, legs, and smaller parts into the carrying bag first and place the material on top to keep material from creasing or tearing.

For more information, technical support or your local EPV Screens contact, please visit www.epvscreens.com